

TOOL

NO. 941-903




 **MICRO MATIC**

DEDICATED TO
DRAFT QUALITY


OPERATING INSTRUCTION FOR

941-903

Tool No. 941-903 can be used for disassembly and assembly of the flat type spears.

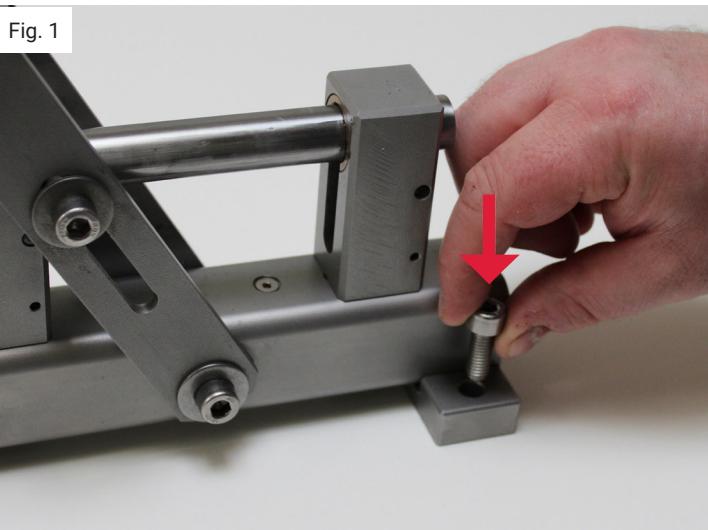

Mount tool no. 941-903 to a table or another object.

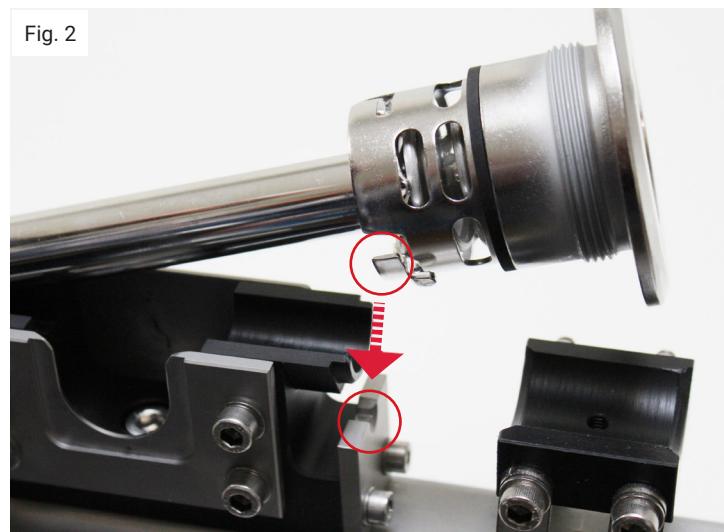


Place the spear in the tool and make sure that the safety device is fitted in the recess as shown on the illustration.

OPERATING INSTRUCTION FOR


941-903

Fig. 3

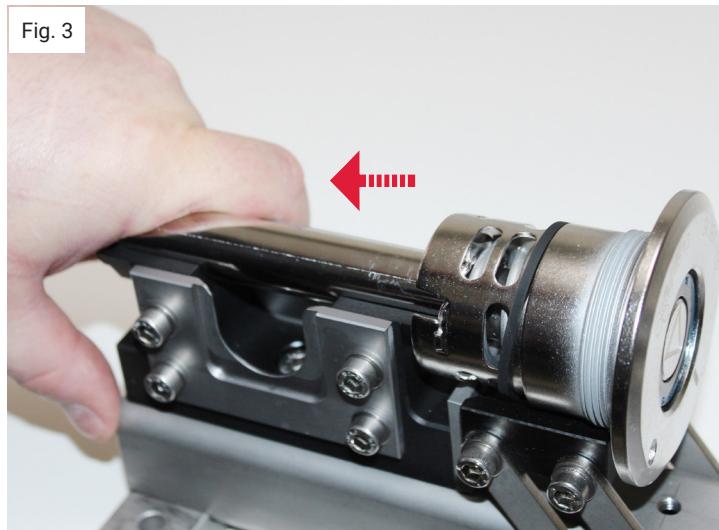


Pull the spear backwards so that it is fixed.

Fig. 4

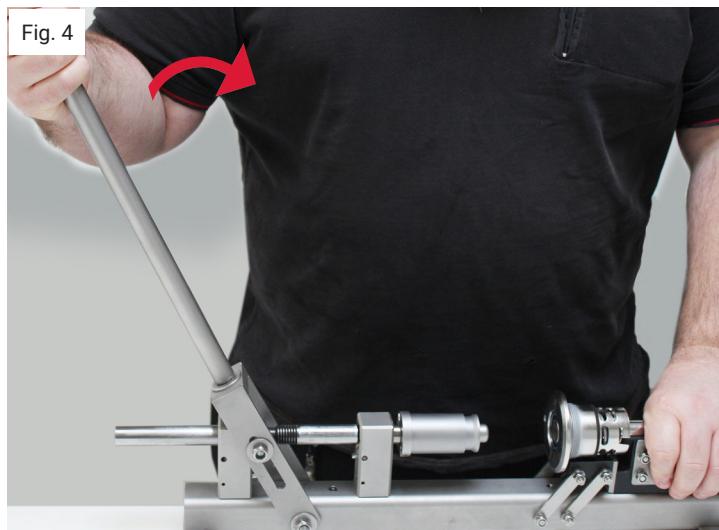

Pull the handle forward towards the spear.

Fig. 5

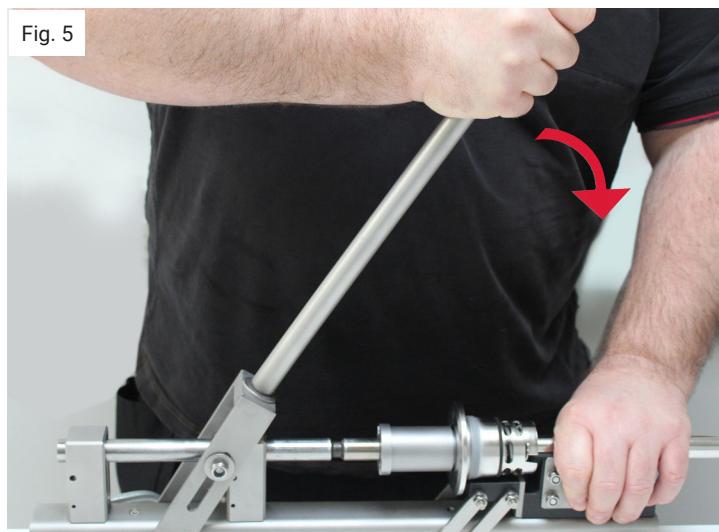

Make sure it is fully stroked.

OPERATING INSTRUCTION FOR


941-903

Fig. 6




Turn and release the spear body.

Fig. 7

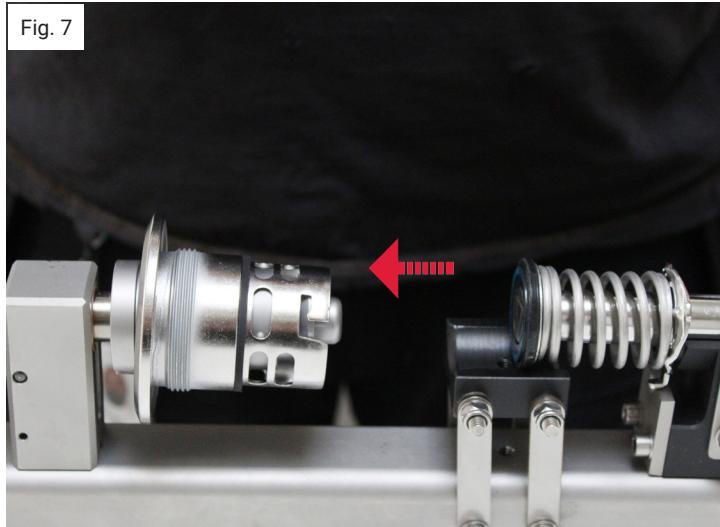

Pull the handle back and make sure that the spear body remain fixed on the piston.

Fig. 8

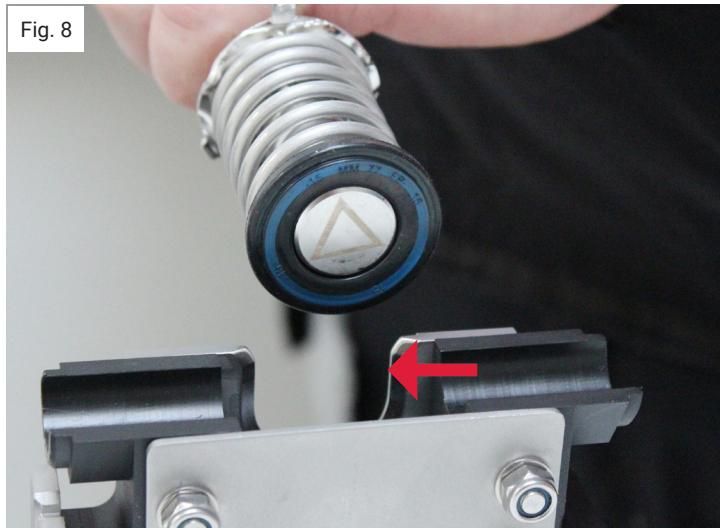


Mount the down tube in the U-holder.

OPERATING INSTRUCTION FOR

941-903

Fig. 9

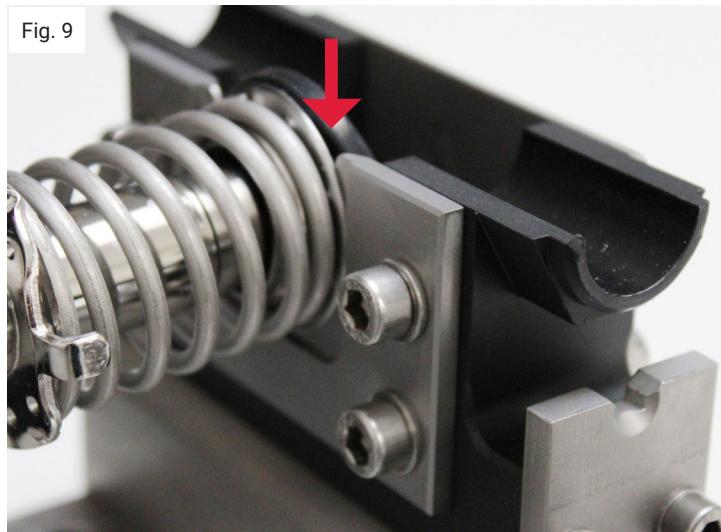

Make sure that it is placed between the washer and the gasket.

Fig. 10



Pull the spear tube upwards.

Fig. 11



The washer and the gasket are released from the down tube.

OPERATING INSTRUCTION FOR

941-903

Fig. 12



The new gasket must be moisted before mounting.

Fig. 13



Place the spear body, gasket and the washer on the piston as shown on the illustration.

Fig. 14



The gasket and the washer is now in fixed position.

OPERATING INSTRUCTION FOR


941-903

Fig. 15




Mount the downtube in the holder and make sure that the safety device is placed in the recess.

Fig. 16

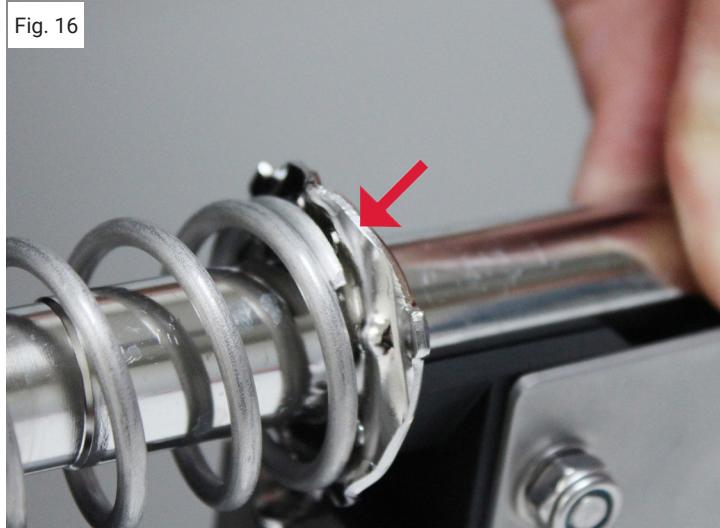

Please make sure that the spring end is placed as shown on the illustration.

Fig. 17

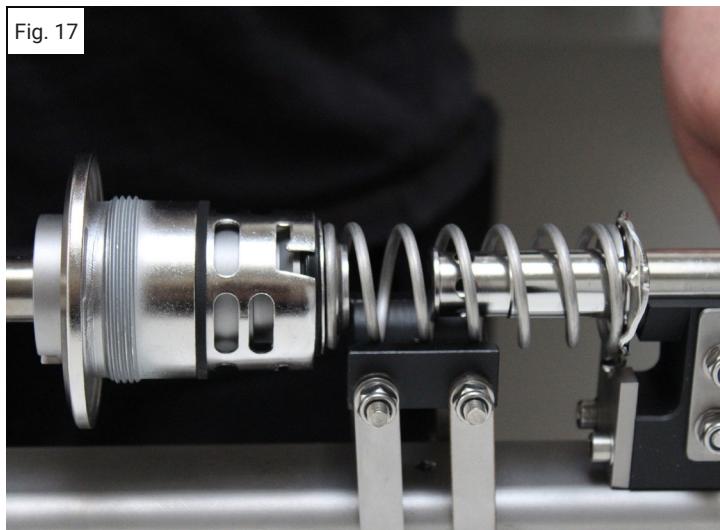

All parts are now fixed in the tool.

OPERATING INSTRUCTION FOR


941-903

Fig.18




Pull the handle fully forwards.

Fig. 19

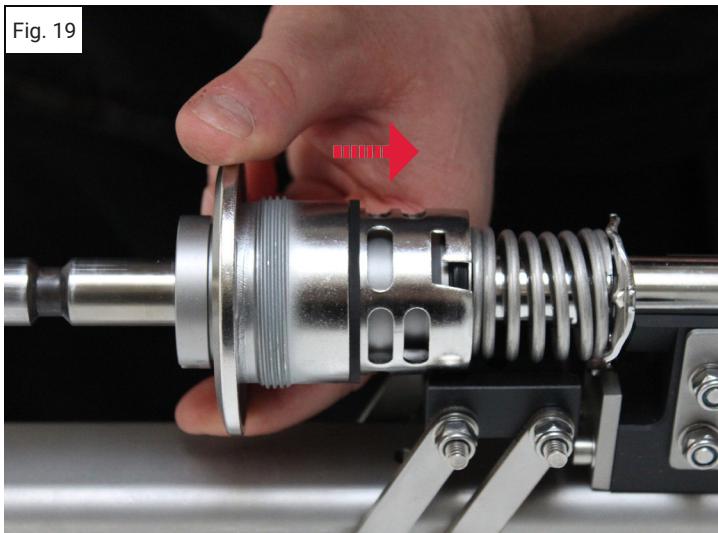

Pull the spear house forwards over the down tube.

Fig. 20

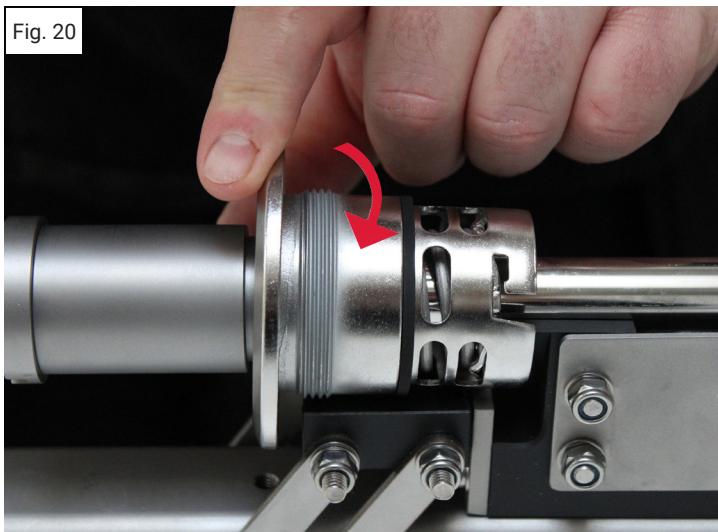


Turn the spear house clock wise and make sure it is fully fixed.


OPERATING INSTRUCTION FOR

941-903

Information about Click Function

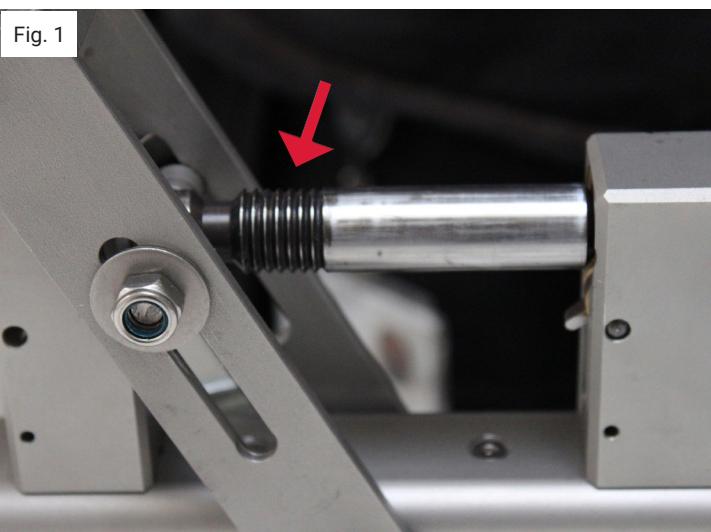

The grooves for click function makes sure, that the tool has fully stroke.

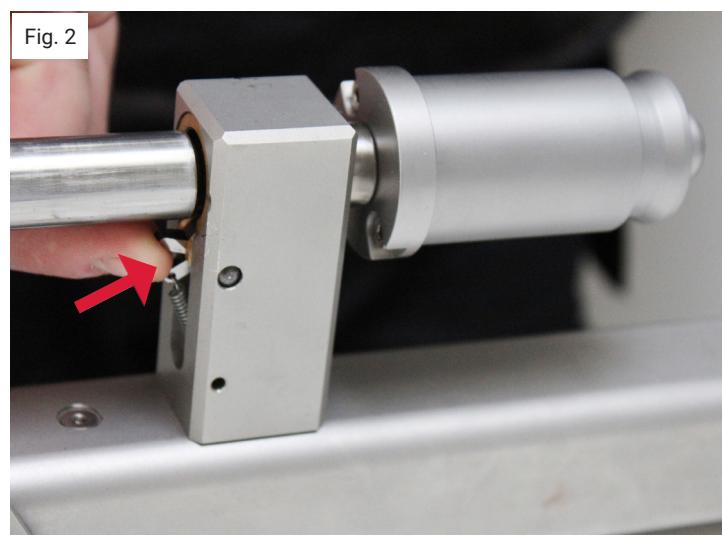

In case of mal-function of the click function the lever shown can un-lock this function.

NOTES

NOTES

