



## DIE KORREkte MONTAGE

BITTE BEACHTEN SIE BEIM EINSATZ DER MICRO MATIC CO<sub>2</sub>-GASVERTEILER UNBEDINGT DIE FOLGENDEN INSTALLATIONSHINWEISE:




ACHTEN SIE AUF EINE AUSREICHENDE LUFTZIRKULATION IM ANWENDUNGSBEREICH



INSTALLIEREN SIE GEgebenENFALLS EINE GEEIGNETE GASWARNANLAGE



EXTERNE ANSCHLUSSTEILE DÜRFEN NUR MIT EINEM MAXIMALEN DREHMOMENT VON 20 Nm ANGEZOGEN WERDEN

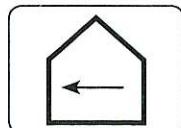

DER CO<sub>2</sub>-GASVERTEILER MUSS SPANNUNGSFREI AUF EINER EBENEN OBERFLÄCHE BEFESTIGT WERDEN. MAXIMALER ARBEITSDRUCK 7 BAR




DIE ARMATUR MUSS IN EINEM EINWANDFREIEN ZUSTAND GEHALTEN WERDEN



## FOR CORRECT INSTALLATION

PLEASE NOTE THAT IN CONNECTION WITH THE USE OF THE MICRO MATIC CO<sub>2</sub> GAS DISTRIBUTOR, THE FOLLOWING ACTIONS MUST BE TAKEN:

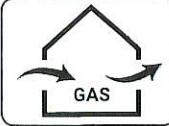


ALWAYS ENSURE SUFFICIENT VENTILATION OF THE ROOM WHERE THE GAS IS IN USE



INSTALL A GAS ALARM IN THE ROOM WHERE THE GAS IS IN USE



EXTERNAL CONNECTIONS FITTED TO THE CO<sub>2</sub> DISTRIBUTOR MUST NOT BE TIGHTENED WITH A TORQUE HIGHER THAN 20 Nm

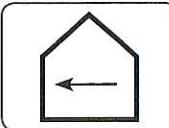

THE CO<sub>2</sub> DISTRIBUTOR MUST BE MOUNTED ON A FLAT SURFACE. MAX. WORKING PRESSURE 7 BAR



EQUIPMENT MUST BE MAINTAINED IN GOOD WORKING ORDER

105-935 (Rev. 2) 220519

MICRO MATIC

MICRO MATIC